




Holo Board (55 Inch) User Manual

Product Model: JJ-F67-T






1 Packing List

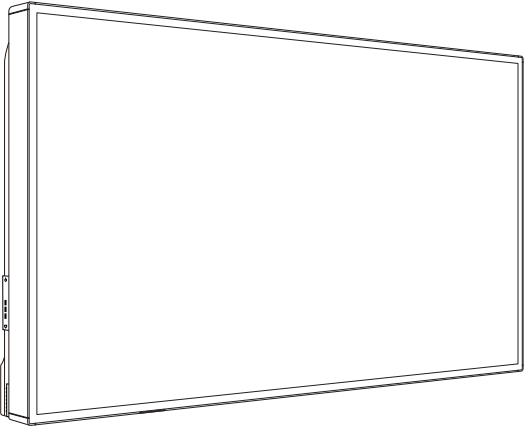



Main Components

 Touch Display ×1	 Remote Control ×1
	 Stylus Pen ×2

Accessories

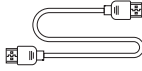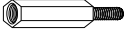 HUB ×1	 Power Cable ×1 Remote Control
 HDMI Cable ×1	 M6 Bolt ×4  M6*15 Screws ×4


Optional

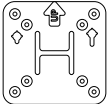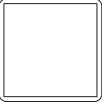 NUC Computer Bracket ×1	 Computer ×1
--	--

2.1 Environment



 For the best user experience, please place the Holo Board with approx. 2.3 feet/ 0.7m from your conference table, also keep the middle of the Holo Board aligned to the middle of the conference table.

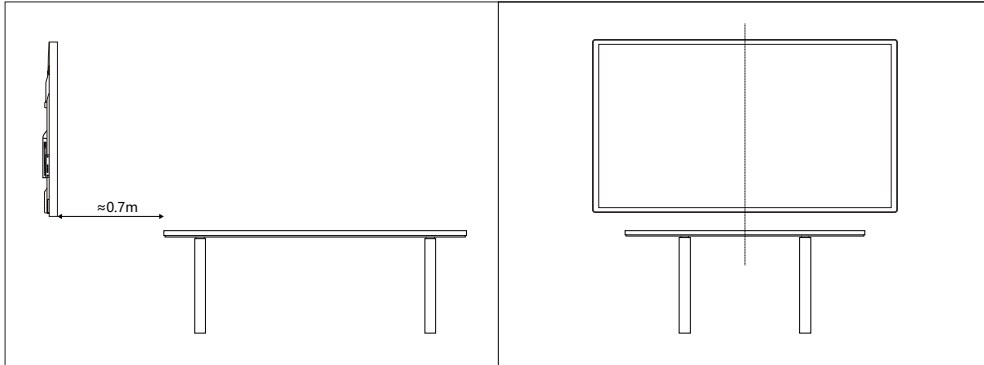

2.2 Installation Procedure



 
HoloBoard can be installed as wall mount or floor stand. Please choose accordingly based on your preference.

a. **Wall mount:** Please use your own wall mount bracket (support up to 35 kg)




CAUTION

Please install the M6 Bolt to the VESA screw hole before install your wall mount bracket.

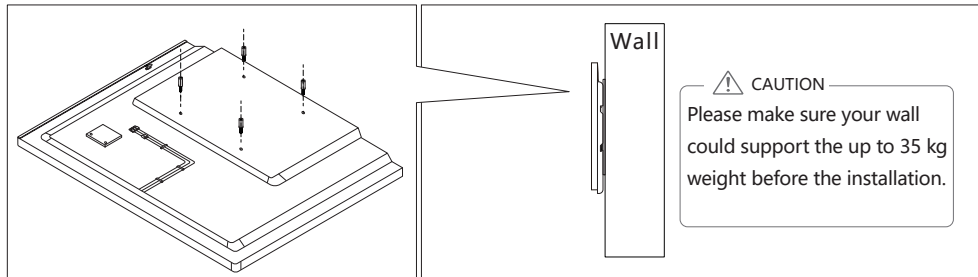

 b. **Floor stand:** sold separately, please refer to the installation guide of the floor stand.

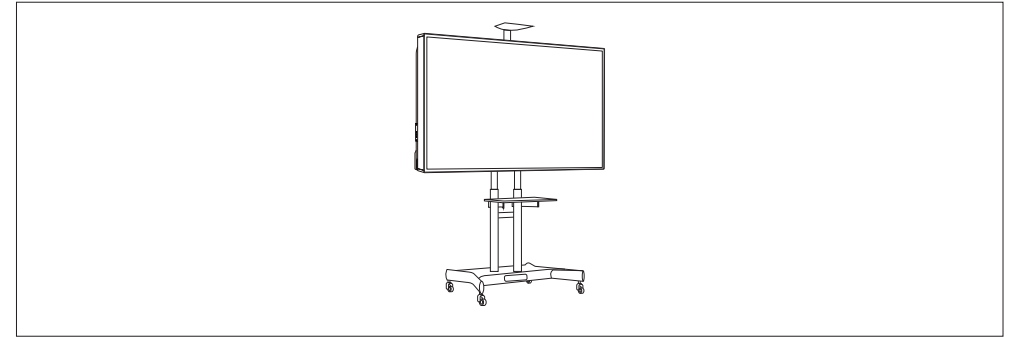

2.3 Hardware requirements for computer



CAUTION

This part is prepared for the users who want to use their own computer, skip this if you have a built-in PC with your device.

	Minimum Requirements	Recommend Requirements
CPU	7th Generation Intel® Core™ i3 Processor or above	7th Generation Intel® Core™ i5 Processor or above
RAM	16 GB or above	16 GB or above
Graphics	Intel® HD Graphics (Nvidia GTX 970 is required for object recognition applications)	Intel® HD Graphics (Nvidia GTX 1060 is required for object recognition applications)
Video Output	4K (3860 x 2160) 60Hz	4K (3860 x 2160) 60Hz

 
2.4 Install the Intel NUC




CAUTION

This part is prepared for the users who want to use their own computer, skip this if you have a built-in PC with your device.

- a. Please install the NUC computer bracket to back side of the Holo Board as below;

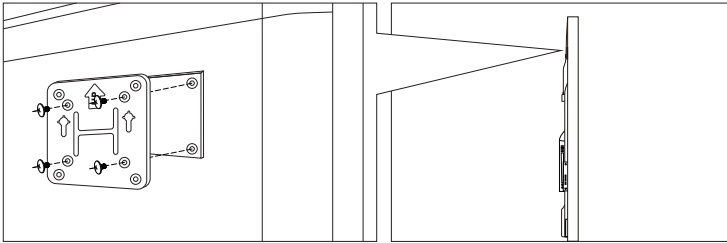

 - b. Please install the screws to the NUC and mount the NUC to the bracket.

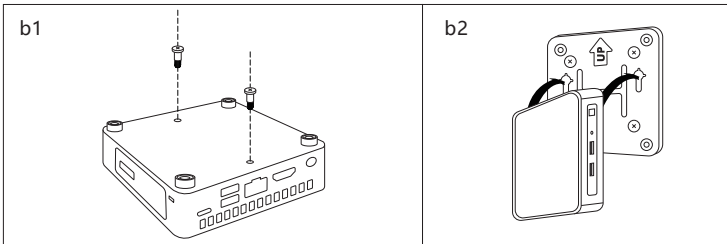

2.5 Instruction for connecting to your PC

 


CAUTION


This part is prepared for the users who want to use their own computer, skip this if you have a built-in PC with your device.

Please make sure your HDMI cable is HDMI 2.0 compliance.

- a. Please connect the 3 USB cables from the Holo Board to your computer directly.
(Light-Field Sensor-1, Light-Field Sensor-2, Holo Board Camera)

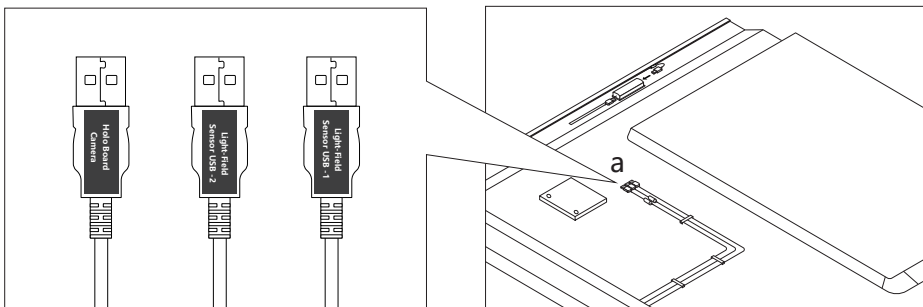

 - b. Please connect the touch sensor USB cable to the USB HUB below, and connect the USB HUB to your computer, you can also connect your keyboard/mouse/usb storage device to the HUB.

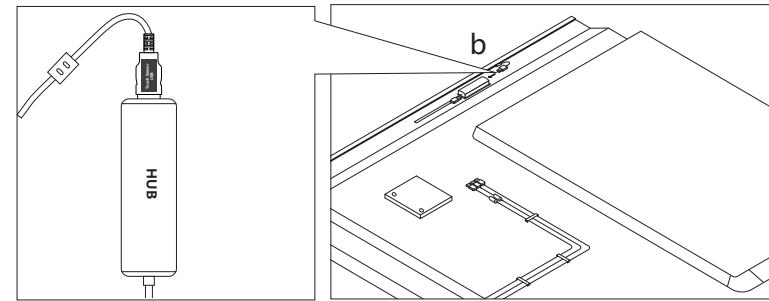

CAUTION

Please DO NOT connect the USB cable at step 2.5 (a) to the HUB

- c. Please connect the HDMI cable to the HDMI 1 port of your Holo Board and your computer.


3 Start to use Holo Board

 


CAUTION

Holo Board will start automatically once powered on.

1. Holo Board with a Built-in PC.

- a) Press the  button of your remote controller to power the Holo Board, the system will start automatically, if the Holo Board displays a “no signal” message with a blue screen, please press the power button once and it will light on.

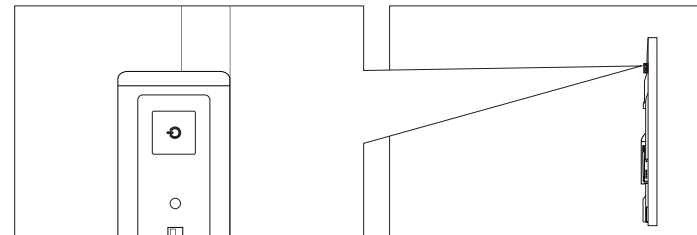


- b) You can press the power button at the left side of the Holo Board.

2. Holo Board with your own PC.

CAUTION

Please be aware that you need to start the Magic Table and PC separately.

- a) please use the  button from the remote controller to start the Holo Board display;
b) Start the computer manually.